

**Antex Audio Card
LX22m / LX24m / LX44 / BX44 / SC22
User's Guide**

Antex Electronics Corporation
1125 W. 190th Street
Gardena, CA USA 90248
www.antex.com
800 338-4231

Antex Electronics Corporation
1125 W. 190th Street
Gardena, California 90248
USA

Copyright © 1999 Antex Electronics Corporation. All Rights Reserved.

No portion of this manual may be reproduced without prior written consent from Antex Electronics. The copyright protection claimed here includes photocopying, translation, and/or reformatting of the information contained in this manual.

Printed in the United States of America. Part Number: 9000-2424-7006,
Revision B.

FCC Compliance Statement for United States Users

This equipment has been tested and found to comply with the limits for a Class B computing device, pursuant to Part 15 of the FCC Rules. In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. Changes or modifications made to this equipment not expressly approved by Antex Electronics, could void the user's authority to operate the equipment.

CE Compliance Statement for International Users

This equipment has been tested and found to comply with CE Class B requirements. Standards to which conformity is declared: EN55022 (Class B) 1994, EN 50082-1 1992.

Table of Contents

Chapter 1 ❖ Installation.....	1-1
❖ Check For These Items	1-1
❖ Installing Your Audio Card	1-2
❖ Installing NT Drivers	1-3
❖ NT Driver Installation (OEM Silent Method)	1-4
OEM silent installation examples	1-5
❖ Windows 95/98 Driver Installation.....	1-6
❖ Installing Antex Mixer, Demo and Meter	1-7
❖ Final Testing.....	1-7
Chapter 2 ❖ Demo, Mixer and Meter	2-1
❖ Antex Demo.....	2-1
Demo main window and features.....	2-1
Synchronizing playback of multiple devices	2-3
Digital feedthrough mode.....	2-3
❖ Antex Mixer.....	2-4
Mixer main window features.....	2-4
Record and playback controls and indicators.....	2-5
BX44/SC22 Adapter line controls and indicators.....	2-7
Mixer timecode controls for BX44 and SC22.....	2-9
❖ Antex Meter	2-11
Meter options.....	2-11
Chapter 3 ❖ Specifications, Pinouts and Schematics	
.....	3-1
❖ Specifications	3-1

Table of Contents ❖

- General..... 3-1
- Analog Signal Quality 3-1
- Audio Input / Output..... 3-2
- External Bracket Connectors 3-3
- Internal Connections..... 3-3
- Memory 3-3
- MIDI Interface (BX44 only)..... 3-4
- PC Interface 3-4
- Sample Clock Generator 3-4
- Signal Processor 3-4
- SMPTE Interface (SC22 and BX44)..... 3-5
- ❖ I/O Port Pinouts and Cable Schematics..... 3-5
 - Balanced Analog I/O Port Pinouts 3-5
 - Four-Channel Balanced Analog I/O Cable Schematic 3-6
 - Balanced-to-Singled-Ended Adapter Schematic 3-7
 - Digital I/O and Sync Port Pinouts..... 3-8
 - Digital I/O Cable Schematic..... 3-9